

## TOP CONVERSION FOR VINYL CARTS




1. Remove the phillips head screws that secure the HDPE top to upper trim around the perimeter of the cart (8-12 screws based on cart model)





2. Remove the Phillips head screws that secure the upper trim to the cart body (8-12 screws based on cart model)



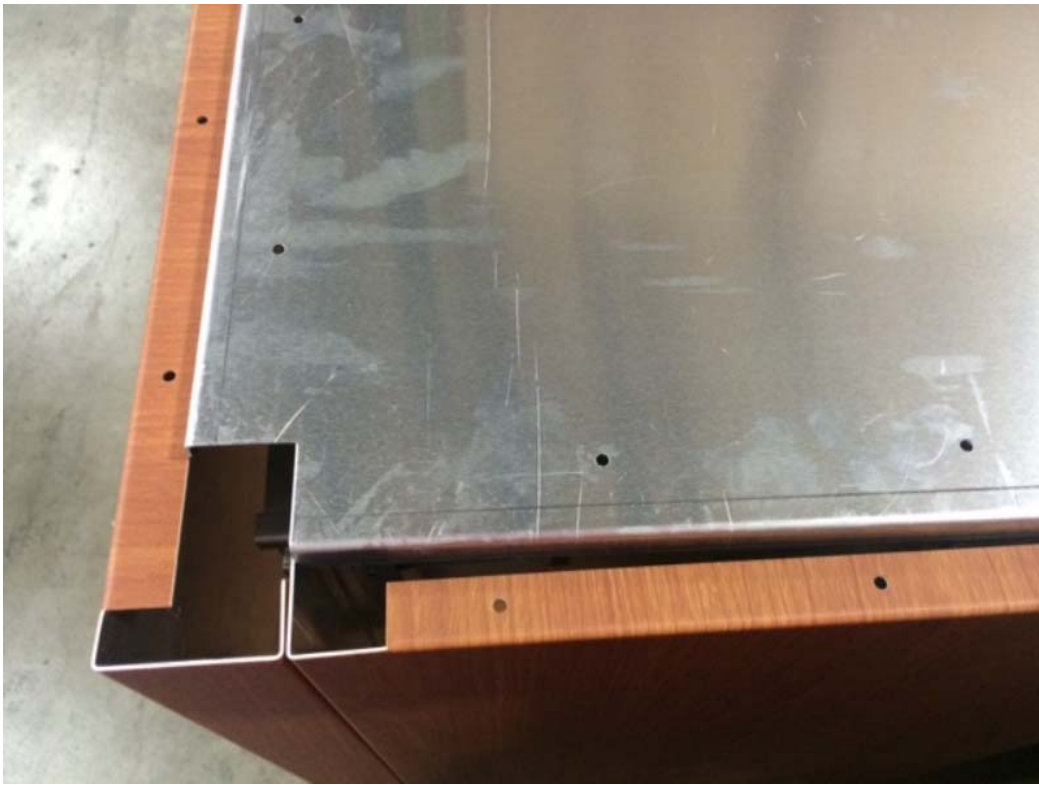

3. Align the holes of the sub-top with the corresponding holes on the cart body and secure with #54 pop rivets  
\* 5/16" holes must be drilled through the front of the cart body to fasten the sub-top to the cart



4. Install double sided 3M tape. Clean the area with rubbing alcohol before installing or lightly scuff with low grit sandpaper for best adhesion.



5. Install the new ABS top





6. Reinstall the black screws used to attach the upper trim to fill exposed holes (optional)

