


ROLLER CATCH REPLACEMENT

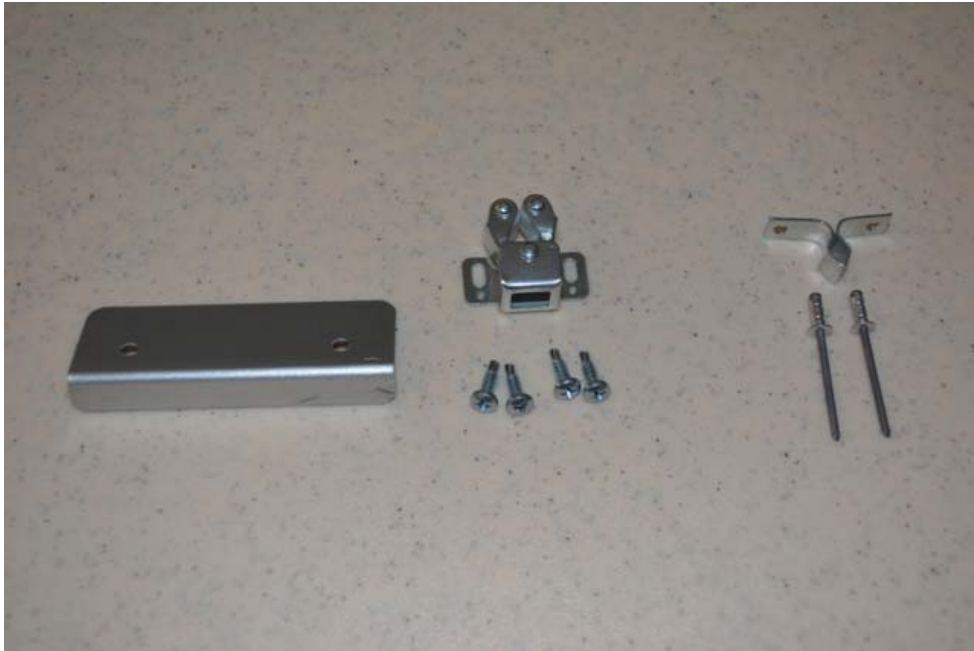

1. Remove broken roller catch and flat file off any remaining burrs



2. Install roller catch mounting angle





3. Clip new roller catch onto the existing receiver and screw into place



